

Remove Slide as per manual

Push guide rod forward

Insert pin in take down hole

Ensure pin does not extend past bushing

Remove guide rod, recoil spring and bushing from the rear of the slide

Use caution when handling compressed recoil spring

Pivot barrel link forward

Remove barrel from front of slide

Further disassembly not required.